

Doctor Bearing

Applications


The Versalite split doctor bearing incorporates both a split housing and split bearing. This design allows removal of the top section of the housing and journal block without disturbing the position of the bottom section of the housing. As a result, it is possible to replace the doctor assembly without disturbing the basic alignment of the doctor.

Features

- ▶ Self-lubricating, composite ball
- ▶ No cam followers
- ▶ Applicable for all doctoring positions
- ▶ Adjusting screw take-ups the wear gap, prevents vibration, and prolongs the useful life

Benefits

- ▶ Reduced downtime
- ▶ Improved oscillator performance
- ▶ Accurate doctor alignment
- ▶ Improved doctoring

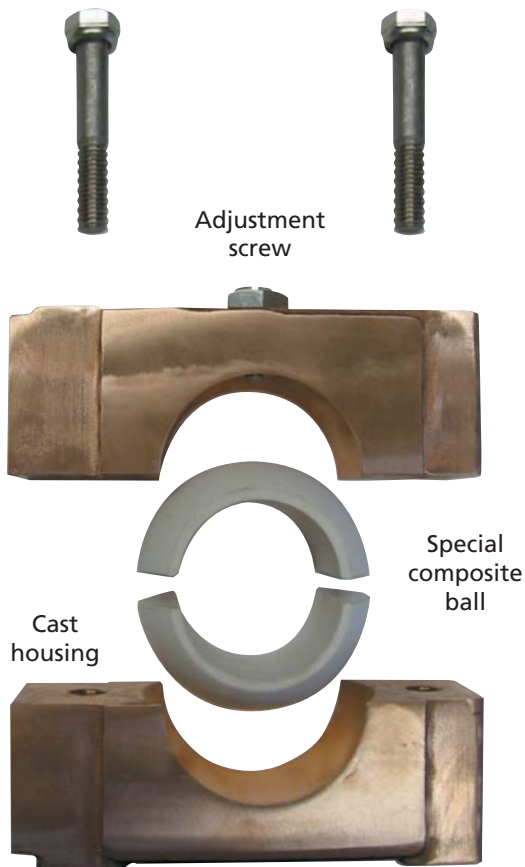

Contact us: